




PRESSURE SWITCH


Assembly and Parts List

DNA

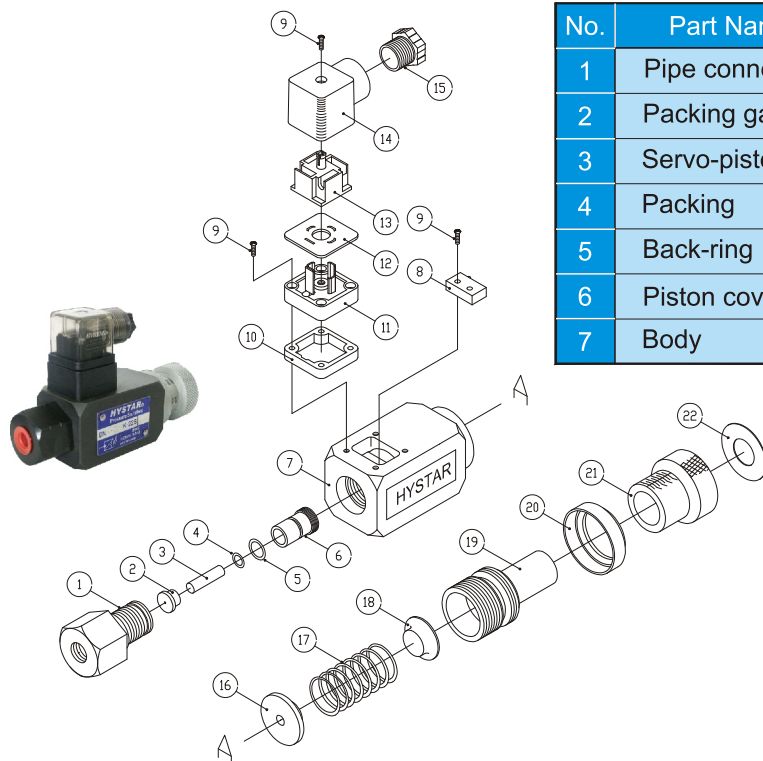

No.	Part Name	No.	Part Name
1	Pipe connector	8	Micro-switch
2	Packing gasket	9	Fixing screw
3	Servo-piston	10	Electric connector gasket
4	Packing	11	Electric connector base
5	Back-ring	12	Gasket
6	Piston cover	13	Terminal block
7	Body	14	Housing
		15	Gland-nut
		16	Mechanical stop
		17	Spring
		18	Spring retainer
		19	Pressure adj. screw
		20	Control knob set screw
		21	Control knob
		22	Nameplate


DNB

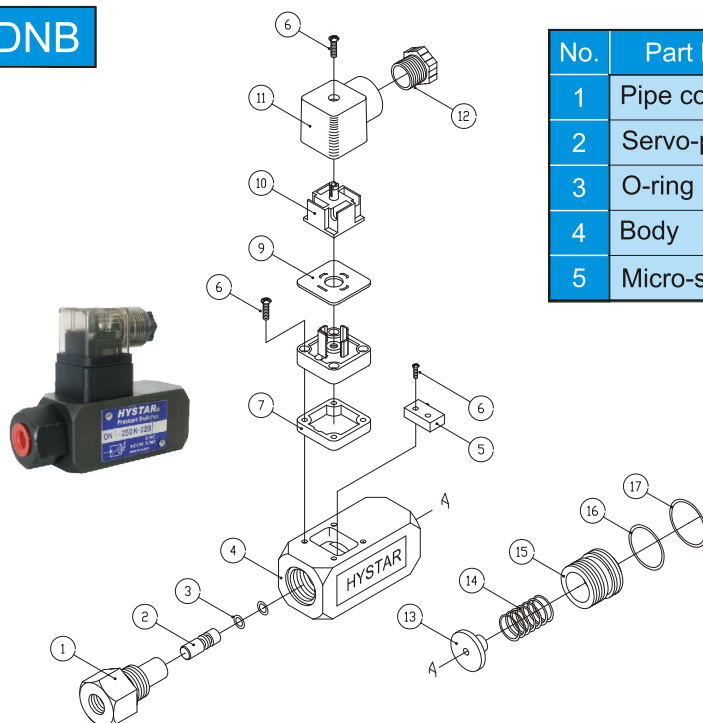

No.	Part Name	No.	Part Name
1	Pipe connector	6	Fixing screw
2	Servo-piston	7	Electric connector gasket
3	O-ring	8	Electric connector base
4	Body	9	Gasket
5	Micro-switch	10	Terminal block
		11	Housing
		12	Gland-nut
		13	Mechanical stop
		14	Spring
		15	Pressure adj. screw
		16	O-ring
		17	O-ring


Assembly and Parts List

DNC

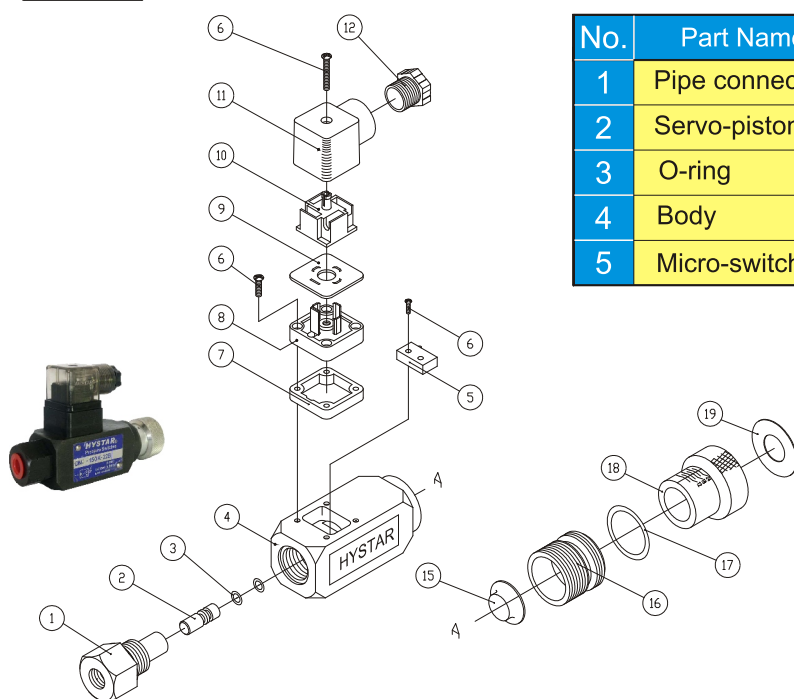

No.	Part Name	No.	Part Name
1	Pipe connector	6	Fixing screw
2	Servo-piston	7	Electric connector gasket
3	O-ring	8	Electric connector base
4	Body	9	Gasket
5	Micro-switch	10	Terminal block
		11	Housing
		12	Gland-nut
		13	Mechanical stop
		14	Spring
		15	Spring retainer
		16	Pressure adj. screw
		17	O-ring
		18	Control knob
		19	Nameplate

DNF

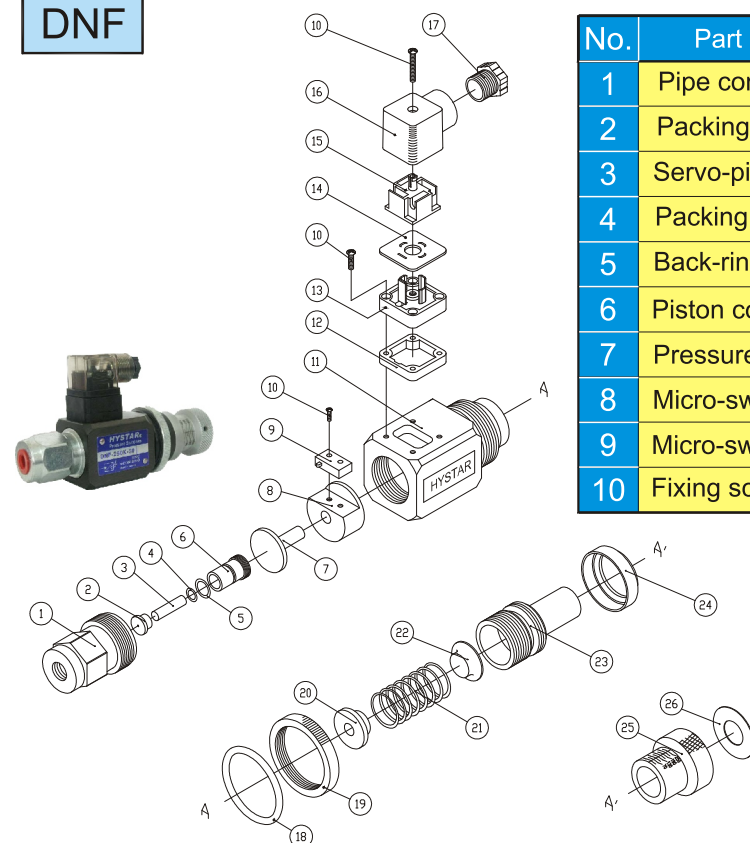

No.	Part Name	No.	Part Name
1	Pipe connector	11	Body
2	Packing gasket	12	Electric connector gasket
3	Servo-piston	13	Electric connector base
4	Packing	14	Gasket
5	Back-ring	15	Terminal block
6	Piston cover	16	Housing
7	Pressure actuator	17	Gland-nut
8	Micro-switch seat	18	O-ring
9	Micro-switch	19	Screw-nut
10	Fixing screw	20	Mechanical stop
		21	Spring
		22	Spring retainer
		23	Pressure adj. screw
		24	Control knob set screw
		25	Control knob
		26	Nameplate